



H & W Machine Repair and Rebuilding, Inc.

2119 Meyer Road, Fort Wayne, IN 46803

Phone: (260) 422-0020 - (800) 285-5271 - Fax: 260,423,9476


E-Mail: admin@hwmachinerepair.com - Web Site: www.machinerypartsdepot.com

What Type of Bridgeport Do I Have?

What HP is your motor

Not Here

Look Here

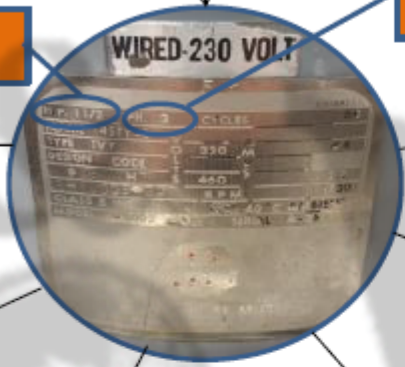

1

5

You have a Series I Bridgeport Machine with a Step Pulley head



Y

Is your table size a 32" 36" 42" or 48"

N

You may have a Bridgeport head on a non-Bridgeport body. Our base machine parts may not work on your machine



1.5

N

Is your table size a 32" 36" 42" or 48"

Y

You have a Series I Bridgeport Machine with a 1-1/2 HP Variable Speed Head



2

N

Is your table size a 32" 36" 42" or 48"

Y

You have a Series I Bridgeport Machine with a 2 HP Variable Speed



Wait! My machine says Series II but you are telling me I have a Series I? Yes! In the late 90's Bridgeport put Series II on many of their Series I machines, trust us, it's a Series I!

4

Is your table size a 54" or 58"

N

You have a Series II Special Bridgeport Machine with a 2 HP



Y

Is your table size a 54" or 58"

Y

You have a Series II Bridgeport Machine with a 4 HP Head



3

You do not have a Bridgeport Machine or yours was modified. Some of our head parts may not fit on your machine

N